


**IMPORTANT**  
Load Hot and Neutral must pass through the Sensor Coil Ring

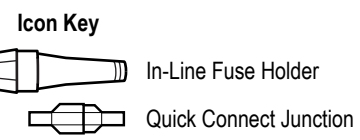

**SMS Enclosure Panel Assembly Wiring View**

|                 |                        |               |
|-----------------|------------------------|---------------|
| PN 3116         | Document No. 980009840 |               |
| Date: 4.15.2013 | Rev. 002               |               |
| By: K. Teichman | Scale:                 | Sheet: 1 of 1 |

**BLUE SEA SYSTEMS**  
 425 Sequoia Drive  
 Bellingham, WA 98226  
 p: 360.738.8230  
 f: 800.222.7617 USA and Canada  
 f: 360.734.4195  
 conductor@blueseasystems.com  
 www.blueseasystems.com