

# ANALYTIC SYSTEMS

Power Conversion Solutions

## INSTALLATION & OPERATION MANUAL

### IPSi1200-125 HIGH VOLTAGE PURE-SINE INVERTER



An ISO9001 Registered Company Battery Chargers • Inverters • Power Supplies • Voltage Converters

8128 River Way, Delta B.C. V4G 1K5 Canada T. 604.946.9981 F. 604.946.9983 TF. 800.668.3884 (US/CANADA)

[www.analyticssystems.com](http://www.analyticssystems.com)

# INVERTER

## IMPORTANT SAFETY INSTRUCTIONS

---

**SAVE THESE INSTRUCTIONS** — This manual contains important safety and operating instructions for the Inverter.

1. Do not expose the Inverter to rain or snow unless it is a sealed model.
2. Use of an attachment not recommended or sold by the Inverter manufacturer may result in a risk of electric shock, fire, or injury to persons.
3. Do not disassemble the Inverter; take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect the Inverter from the input power before attempting any maintenance or cleaning. Turning it off will not reduce this risk.
5. Never place the Inverter directly above a battery; gases from the battery will corrode and damage the Inverter.
6. Never allow battery acid to drip onto the Inverter.

**GROUNDING AND AC POWER CORD CONNECTION INSTRUCTIONS** — Inverters should be grounded to reduce risk of electric shock. This Inverter is equipped with a chassis grounding stud and electric receptacles capable of accepting an equipment-grounding conductor and a grounding plug.

### **Medical Equipment Notice**

Analytic Systems does not recommend the use of their products in life support applications where failure or malfunction of the product can be reasonably expected to cause failure of the life support device or to significantly affect its safety or effectiveness. Analytic Systems does not recommend the use of any of its products in direct patient care. Examples of devices considered to be life support devices are neonatal oxygen analyzers, nerve stimulators (whether used for anesthesia, pain relief, or other purposes), auto-transfusion devices, blood pumps, defibrillators, arrhythmia detectors and alarms, pacemakers, hemodialysis systems, peritoneal dialysis systems, neonatal ventilator incubators, ventilators for both adults and infants, anesthesia ventilators, and infusion pumps as well as any other devices designated as “critical” by the U.S. FDA

**HEAVY DEVICE** - The IPSi1200 Inverters weigh approximately 30lbs. Please use appropriate safety measures when lifting or moving these units.



# **TABLE OF CONTENTS**

- Front Cover
- Product Warnings and Advisories
- Table of Contents
- Introduction
- Box Contents
- Main Parts
- Operation
- Indicators
- Installation
- DC/AC Connections
- Troubleshooting
- Options
- Specifications
- Warranty



**ANALYTIC SYSTEMS**  
Power Conversion Solutions

Copyright (2005-2017) Analytic Systems Ware (1993) Ltd.

Revised - May 16, 2018



## Introduction

---

The IPSi1200 series *Intelligent* Pure Sinewave Inverter is designed specifically for powering computers and other sensitive AC loads in rugged, mobile, off-grid environments. It produces pure sinewave AC power, identical to a conventional AC outlet.

Internally, the IPSi1200 is controlled by a sophisticated Digital Signal Processor (DSP) for optimal control and the most efficient operation possible. The heavy-duty Toroidal Power Transformer steps the low voltage AC produced by the Power MOSFET Transistors from 110 or 220 VAC at 50 or 60 Hz. Additional filtering on the AC output reduces and eliminates EMI noise that can interfere with sensitive communications equipment.

Built for the safest operation possible, this unit features low voltage warning with shutdown circuitry to protect the DC power source. While the inverter is safeguarded by high voltage and over temperature protection both with shutdown circuitry. All the alarm conditions can be monitored on the bright LED indicator display which can also be mirrored on the optional remote control panel.

Using the free-to-download *InverterWizard* software from Analytic Systems, you can select output frequency, adjust the voltage shutdown thresholds or view and record operating data from any PC with a standard USB interface.

## Box Contents


---

The box you have received should contain the following:

- 1 IPSi12000 *Intelligent* Puresine Inverter
- 1 compatible USB cable
- 1 Warranty Card
- This User Guide (A PDF copy can be downloaded from [www.analyticssystem.com](http://www.analyticssystem.com))
- Optional *InverterWizard* software can be downloaded from [www.analyticssystem.com](http://www.analyticssystem.com)



# Main Parts

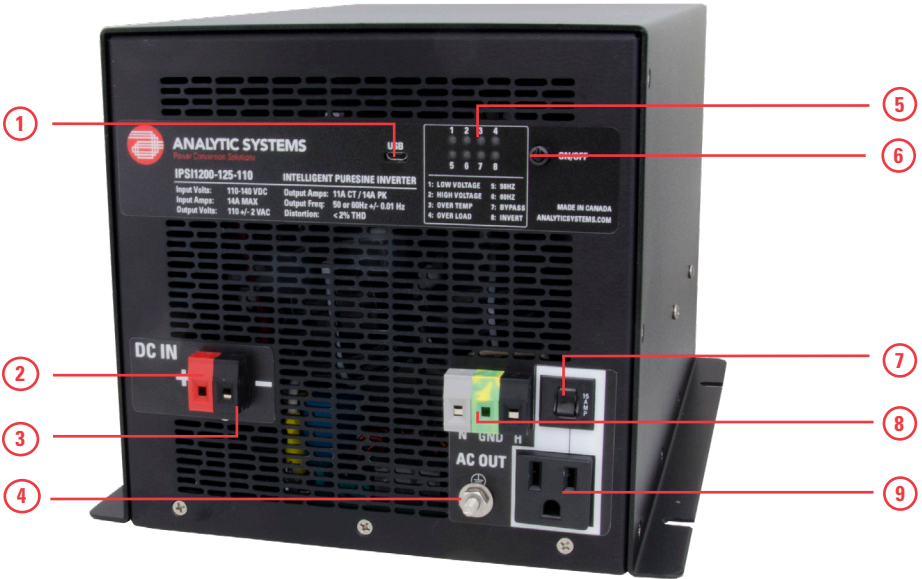

## Front Panel

- |                                 |                                   |
|---------------------------------|-----------------------------------|
| 1. MicroUSB Port                | 6. Power Push Button              |
| 2. Positive DC Input Connection | 7. Output Fuse                    |
| 3. Negative DC Input Connection | 8. Hard wire AC Output Connection |
| 4. Chassis Grounding Stud       | 9. NEMA 5-15 AC Output Connection |
| 5. Indicator LEDs               |                                   |

## Rear Panel (Not shown)

1. Thermostatic Cooling Fans (x2)



## Operation

---

Before operating, the Inverter must be properly installed and the load(s) and batteries must be properly connected. See *Installation*, *DC Connections*, and *AC connections* for more information.

Move the power switch to ON to energize the circuitry. The AC Power LED, Invert LED, and either the 50 Hz or 60 Hz LED will glow green indicating the presence of AC power at the output. The inverter will begin supplying the load with voltage and current printed on its label.

## Controls and Indicators

---

The Inverter's front panel features 8 LED indicators to display the unit's operating condition. Their functions are detailed below.

**Low Voltage:** This LED blinks red when the input voltage nears the minimum limit for proper operation. It glows red when the input voltage is too low for proper operation. The Bypass LED will also glow red and the Invert LED and AC Power LED will turn off.

**High Voltage:** The LED blinks red when the input voltage nears the maximum limit for proper operation. It glows red when the input voltage is too high for proper operation. The Bypass LED will also glow red and the Invert LED and AC Power LED will turn off.

**Over Temp:** This LED blinks red if the unit's internal temperature nears the safe limit. The Inverter will automatically derate its maximum power rating to maintain a safe operating temperature. This LED glows red if the Inverter is too hot to operate. The Bypass LED will also glow red and the Invert LED and AC Power LED will turn off.


**Over Load:** This LED blinks red if the current drawn by the load reaches the unit's continuous rating. It glows red if the current drawn reaches the peak rating.

**50 Hz:** This LED glows green if the Inverter is set to output frequency of 50.00 Hz. This setting can be changed using InverterWizard.

**60 Hz:** This LED glows green if the Inverter is set to output frequency of 60.00 Hz. This setting can be changed using InverterWizard.

**Bypass:** This LED glows green if the Inverter is in Bypass mode. This feature is only available on units with the Off-Line UPS option. For more information, see *Off-line UPS* section. This LED glows red if the Inverter is experiencing an alarm condition.

**Invert:** This LED glows green when the Inverter operating normally.

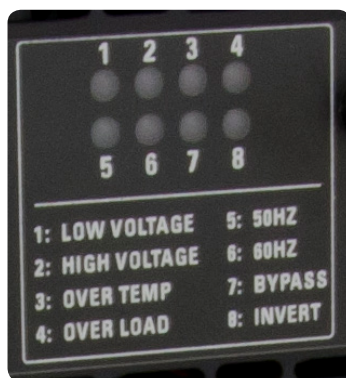



# Installation

---

## Mounting

Mount the Inverter in a WELL VENTILATED and DRY area with at least 1 inch (2.54 cm) of clearance all around the unit for adequate heat dissipation.

**DANGER:** *Do not mount the unit anywhere explosive gases can accumulate.*

A slight arc may form when the power leads are connected and, in the unlikely event of a failure, sparks may be generated inside the unit.

**CAUTION:** *The unit must be mounted on a flat horizontal surface.*

The heavy-duty toroidal power transformer inside the inverter weighs 20+ pounds. Unless the unit is mounted horizontally, it could break free from its single mounting bolt under severe vibration.

## Grounding

The unit case is connected to AC Ground and AC Neutral in order to meet regulatory requirements and reduce the possibility of it generating any radio frequency interference.

The unit case must be bonded appropriately to the grounding system of the vehicle or marine vessel. On a vehicle, bond the case to the vehicle's frame. On a marine vessel, bond the case to the vessel's hull. A grounding stud is provided on the front panel for this purpose.

To ensure proper grounding, check the connection with an ohmmeter. The case is isolated from the DC input, so the DC power can be connected to a different ground from the AC output.

## Disconnecting

If you need to disconnect the Inverter for service or storage:

1. Switch OFF the power and disconnect the DC power source.
2. With power disconnected, switch the power back ON.
3. Leave the Inverter in this state for one minute to discharge the storage capacitors.
4. Return the power switch to the OFF position. Disconnect the load(s).
5. The inverter is ready for service or storage.



## DC Connections

---

**BEFORE MAKING ANY CONNECTIONS, MAKE THE POWER SWITCH IS OFF.**

### DC Input Connection

Before making any connections, prepare a circuit breaker or fuse-protected power DC source with a suitable rating for operation. See *Specifications* for more details.

Two Phoenix VDFK Block Terminals are provided as DC Input Connections.

- The positive DC Input connection is the RED Terminal Block. Connect it to the positive terminal of the DC Power Source using an appropriate gauge RED wire
- The negative DC Input connection is the BLACK Terminal Block. Connect it to the positive terminal of the DC Power Source using an appropriate gauge BLACK wire

**RECOMMENDATION:** *Use the largest gauge (AWG 1/0) recommended) and shortest length of welding wire possible.*

The biggest effect on Inverter performance and EMI is the length and gauge of the DC Input connections.

**CAUTION:** *Ensure the wiring to this connection butts up tightly against the connector.*

To reduce the risk of electric shock, there should be no non-insulated wire exposed.

**CAUTION:** *Do not reverse connect the input wires.*

This will cause serious damage to the Inverter and will not be covered under warranty.





# AC Connections

---

**BEFORE MAKING ANY CONNECTIONS, MAKE THE POWER SWITCH IS OFF.**

## AC Output Connection

One standard NEMA 5-15 AC Outlet protected by a 15A circuit breaker is supplied as an AC output connection.

The wiring pinout of this connection is:

- **Pin A** - AC Hot
- **Pin B** - AC Neutral
- **Pin C** - AC Ground (Chassis)

Three Phoenix VDFK Block Terminals are also provided as a secondary AC Output Connection. This connection is **not** protected by a circuit breaker or fuse, an external circuit breaker or fuse should be used when wiring a load to this connection.

The wiring pinout of this connection is:

- **Black** - AC Hot
- **Gray** - AC Neutral
- **Green/Yellow** - AC Ground (Chassis)

**CAUTION:** *Do not apply AC voltage to either of the output connections.*

This will damage the Inverter and will not be covered under warranty.

## AC Input Connection (Optional)

If the Inverter features the Off-line UPS option, there will also be an AC input connection. Connect a suitable source of AC power to this connection using the appropriate sized wire and a matching cable connector

**Tip:** *For quick reference, AC Output Connections are always female. AC Input Connections are always male.*



# Remote Control Port

This port is intended to connect to an Analytic Systems Digital Remote Control, but can also be used for as a remote ON/OFF switch, isolated RS232 communications terminal and dry contact output fail indicator.

The remote control port is a standard RJ45 style “telephone jack” connector with Analytic Systems proprietary connections. The wire colors in the table below correspond to colors found in any standard T-568B network cable.

**CAUTION: Do not connect this port to a computer!**

This will cause serious damage to the Inverter and computer. This damage is not be covered under warranty.

Pin Number	Wire Color	Function
1	White/Orange Stripe	Remote ON/OFF
2	Orange	Digital Ground
3	White/Green Stripe	+12V Out
4	Blue	RX RS232
5	White/Blue Stripe	TX RS232
6	Green	Gnd RS232
7	White/Brown	Dry Contact Relay
8	Brown	Dry Contact Relay

### Remote On/Off

Pins 1 (White/Orange) and 2 (Orange) can be used to turn the Inverter ON or OFF. Connect the pins together through a switch or relay to turn the Inverter OFF and disconnect them to turn the Inverter ON. The front panel power switch must be ON for this connection to function.

### Isolated RS232 Communications

Pins 4 (Blue), 5 (White/Blue) and 6 (Green) are an isolated RS232 port that can be used for communication to/from the Inverter. Information on the standard data structure or custom programming is available from the Analytic Systems. Pin 4 is RX, Pin 5 is TX and Pin 6 is Return.


### Dry Contact Output Fail Relay

Pins 7 (White/Brown) and 8 (Brown) are wired to the contacts of an output fail relay controlled by the processor. The contacts will be CLOSED if the Inverter is operating normally and OPEN if it has failed. An LED or buzzer can be wired to these pins to serve as a failure indicator.




# Off-line UPS (Optional)

The Off-line UPS (Uninterrupted Power Source) option allows the Inverter to be used as a backup power source in the event of external AC power failure.

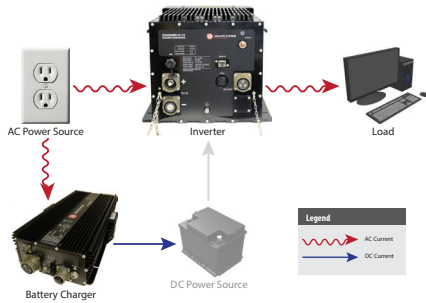

## Normal Operation

- The AC power source supplies AC current to both the battery charger and the load (Running through the Inverter's off-line).
- The battery charger supplies DC power to a battery, maintaining it at full charge. The battery is connected to the Inverter's DC Input Connection(s).

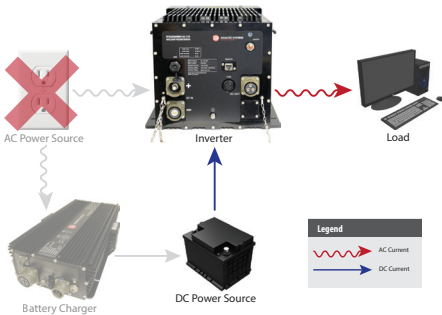

## AC Power Failure

- The Inverter detects a drop in AC Voltage and begins operation.
- The battery supplies DC current to the Inverter which inverts it to AC current to supply the load.
- The Inverter continues operating until it detects that the AC power source has been restored or the battery is discharged.

## To set up the Off-line UPS

1. Connect the external AC power source to the AC Input Connection.
2. Connect the battery bank(s) to the DC Input Connection(s).
3. Connect the load to the AC Output Connection(s).
4. Turn the Inverter ON. The Bypass LED will glow green indicating the load is being supplied with AC power through the Inverter's off-line.
5. If the AC Power fails, the Bypass LED will stop glowing and the Invert LED and 50/60Hz LED will glow green indicating the Inverter is operating.

The voltage thresholds for the Inverter to take over supplying and to stop supplying AC power can be changed using *InverterWizard* to fit your specific needs. For more information, see the *InverterWizard* manual.

**TIP:** Choose batteries with enough capacity to ensure that the Inverter can power the load for the required amount of time in the event of AC power failure.

For example, a 2000W Inverter running from 24 VDC input will draw ~100 amps, so for 2 hours of runtime the minimum required battery capacity is 280 amps hours of capacity at 24 volts.



# Troubleshooting

This unit features eight LED indicators and an alarm buzzer to help diagnose any malfunctions. The Inverter will sound the buzzer to alert you prior to shutting down. You should immediately check the LED indicators to determine the cause of the shutdown.

LED Indicator	Meaning
<b>LOW VOLTAGE</b>	The input voltage is too low for normal operation.
<b>Fix:</b>	<p>Check that the rating of the DC power source is appropriate for the application. Check that the input cables and connections are not corroded or damaged.</p> <p>If using InverterWizard, check the Low Voltage parameters are set properly for the battery voltage you are using, for example: 21V for a 24V battery and 28V for a 32V battery.</p> <p>If everything else is normal, the cause is likely an internal component failure and the unit must be returned for repair.</p>
<b>HIGH VOLTAGE</b>	The input voltage is too high for normal operation.
<b>Fix:</b>	<p>Check that the rating of the DC power source is appropriate for the application. The Inverter can be damaged if the input voltage exceeds the maximum rating. Over-voltage damage is not covered under warranty.</p> <p>If the power source is functioning correctly, the cause is likely an internal component failure and the unit must be returned for repair.</p>
<b>OVER TEMP</b>	The unit's internal temperature is too hot for normal operation.
<b>Fix:</b>	<p>Check that the unit's cooling fans are functioning. If the fans are running, you may need to remount the Inverter for improved ventilation.</p> <p>If the fans are NOT running, the Inverter must be returned to the manufacturer for repair.</p>
<b>OVER LOAD</b>	The load is drawing too much current from the Inverter
<b>Fix:</b>	<p>The unit has been operating at peak current for longer than its intended duty cycle. Reduce the load by disconnecting some devices from the unit's AC output.</p>



## InverterWizard Program

---

The Inverter is factory preset for the input voltage, output voltage, and output frequency on the label. If these parameters are satisfactory, the Inverter can be put immediately into service.

The low voltage shutdown parameters are set for the lowest battery voltage that the Inverter will support. They are:

- 12 Volts for a -12 model
- 24 Volts for a -20 model
- 48 Volts for a -40 model

If the Inverter is powered by alternate DC battery voltage such as 32/36 Volts for a -20 model or 72 Volts (rail) for a -40 model, then the low voltage shutdown parameters will need to be changed. You can do this using the free-to-download *InverterWizard* software from [www.analyticsystems.com](http://www.analyticsystems.com)

With *InverterWizard*, you can also:

- Set the Output Frequency (50.00 or 60.00 Hz)
- Adjust the Output Voltage ( $\pm 10\%$  range at 1 VAC intervals)
- Set the voltage thresholds for UPS (For units with the Off-line UPS Option)
- Update the Inverter's firmware version
- Monitor and record the Inverter's operating data



# Specifications

Input	
Nominal Voltage	125 VDC
Actual Voltage	100 - 140 VDC
Input Amps (max)	14.0 A
Input Fuse	None, external fuse or breaker required
Input Connection	1 30 Amp, 250V Rated CSA/UL Approved Terminal Block, Red for Positive, Black for Negative

Output		
Voltage	110 +/- 2 VAC	220 +/- 4 VAC
Output Amps (cont)	11.0 A	5.5 A
Output Amps (max)	14.0 A	7.0 A
Output Frequency	50.00 ± 0.01 or 60.00 ± 0.01 Hz	
Regulation (Line & load)	< +/- 2.0%	
Output Distortion	<2% at 1200 Watts into resistive load	
Duty Cycle	Continuous: 100% for 24 hours per day, Peak: 10 minutes per hour.	
Output Connection	<ul style="list-style-type: none"> <li>• 1 Circuit Breaker Protected 15A NEMA 5-15 AC Receptacle</li> <li>• 1 30A, 250V Rated CSA/UL Approved Hard Wire Phoenix VDFK4 Terminal Block, Black for Hot, Green for Ground and Grey for Neutral</li> </ul>	

General	
Efficiency	> 90% @ maximum output
Temp. Range	-25°C to +40 C° @ maximum output
Isolation	Input-Output, Input-Case & Output-Case: 1500 VDC
Length	13.0 in / 33.0 cm
Width	9.0 in / 22.9 cm
Height	7.8 in / 19.8 cm
Clearance	1 Inch (2.5 cm) all around
Material	Marine Grade Aluminum
Finish	Black Powder Epoxy/Black Anodized
Fastenings	18-8 Stainless
Weight	30 lb / 13.6 kg
Warranty	Three Years Parts and Labor

\* Specifications subjects to change without notice.

Designed and manufactured by: **ANALYTIC SYSTEMS WARE (1993) LTD.**

8128 River Way  
Delta, BC V4G 1K5 Canada

p. 604.946.9981 f. 604.946.9983  
tf. 800.668.3884 US/Canada

[www.analyticssystem.com](http://www.analyticssystem.com)

[info@analyticssystem.com](mailto:info@analyticssystem.com)

Revised December 2015

# Limited Warranty

---

1. The equipment manufactured by Analytic Systems Ware (1993) Ltd. (the "Warrantor") is warranted to be free from defects in workmanship and materials under normal use and service.
2. This warranty is in effect for:
  - a. 3 Years from date of purchase by the end user for standard products offered in our catalog.
  - b. 2 Years from date of manufacture for non-standard or OEM products
  - c. 1 Year from date of manufacture for encapsulated products.
3. Analytic Systems will determine eligibility for warranty from the date of purchase shown on the warranty card when returned within 30 days, or
  - a. The date of shipment by Analytic Systems, or
  - b. The date of manufacture coded in the serial number, or
  - c. From a copy of the original purchase receipt showing the date of purchase by the user.
4. In case any part of the equipment proves to be defective, the Purchaser should do the following:
  - a. Prepare a written statement of the nature of the defect to the best of the Purchasers knowledge, and include the date of purchase, the place of purchase, and the Purchasers name, address and telephone number.
  - b. Call Analytic Systems at 800-668-3884 or 604-946-9981 and request a return material authorization number (RMA).
  - c. Return the defective part or unit along with the statement at the Purchasers expense to the Warrantor; Analytic Systems Ware (1993) Ltd., 8128 River Way, Delta, B.C., V4G 1K5, Canada.
5. If upon the Warrantor's examination the defect proves to be the result of defective material or workmanship, the equipment will be repaired or replaced at the Warrantor's option without charge, and returned to the Purchaser at the Warrantor's expense by the most economical means. Requests for a different method of return or special handling will incur additional charges and are the responsibility of the Purchaser.
6. Analytic Systems reserves the right to void the warranty if:
  - a. Labels, identification marks or serial numbers are removed or altered in any way.
  - b. Our invoice is unpaid.
  - c. The defect is the result of misuse, neglect, improper installation, environmental conditions, non-authorized repair, alteration or accident.
7. No refund of the purchase price will be granted to the Purchaser, unless the Warrantor is unable to remedy the defect after having a reasonable number of opportunities to do so.
8. Only the Warrantor shall perform warranty service. Any attempt to remedy the defect by anyone else shall render this warranty void.
9. There shall be no warranty for defects or damages caused by faulty installation or hook-up, abuse or misuse of the equipment including exposure to excessive heat, salt or fresh water spray, or water immersion except for equipment specifically stated to be waterproof.
10. No other express warranty is hereby given and there are no warranties that extend beyond those described herein. This warranty is expressly in lieu of any other expressed or implied warranties, including any implied warranty of merchantability, fitness for the ordinary purposes for which such goods are used, or fitness for a particular purpose, or any other obligations on the part of the Warrantor or its employees and representatives.
11. There shall be no responsibility or liability whatsoever on the part of the Warrantor or its employees and representatives for injury to any person or persons, or damage to property, or loss of income or profit, or any other consequential or resulting damage which may be claimed to have been incurred through the use or sale of the equipment, including any possible failure of malfunction of the equipment, or part thereof.
12. The Warrantor assumes no liability for incidental or consequential damages of any kind




DESIGNED AND MANUFACTURED BY



**ANALYTIC SYSTEMS**  
Power Conversion Solutions

Battery Chargers • Inverters • Power Supplies • Voltage Converters

 800-668-3884

 604-946-9983

 [sales@analyticsystems.com](mailto:sales@analyticsystems.com)

 [www.AnalyticSystems.com](http://www.AnalyticSystems.com)

 8128 River Way  
Delta, BC V4G 1K5 | Canada

Register Products Online | [www.analyticsystems.com/support/warranty-registration](http://www.analyticsystems.com/support/warranty-registration)