
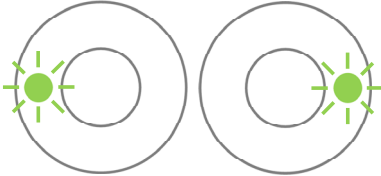




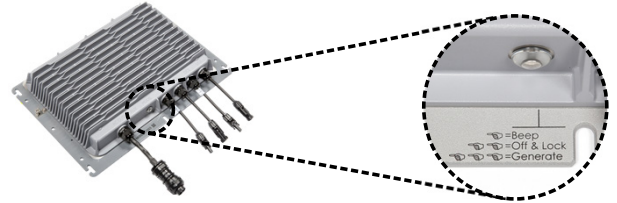






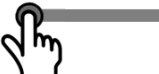
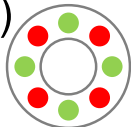

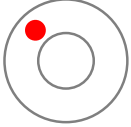
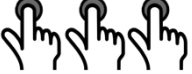
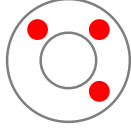




ProHarvest Inverter LED Indicators	
Indicator State	Meaning
Solid 	<ul style="list-style-type: none"> • Powered up • Not generating • No faults
Left-right flash 	<ul style="list-style-type: none"> • Power-on self-test <ul style="list-style-type: none"> □ Will take <1 minute
Green chaser 	<ul style="list-style-type: none"> • Powered up • Generating, no faults
Rapid flash 	<ul style="list-style-type: none"> • Faulted; for example, arc fault detected
Mostly on 	<ul style="list-style-type: none"> • “Off and Locked”; unit is disabled
Mostly off 	<ul style="list-style-type: none"> • Sleeping • Not generating



ProHarvest Front Button		
Button Push		Result
1 press 		<ul style="list-style-type: none"> Inverter beep (“Are you alive?”)
2 presses 		<ul style="list-style-type: none"> “Off & Locked”. Unit is disabled. <ul style="list-style-type: none"> Unit will not begin the 5-minute self-start.
3 presses 		<ul style="list-style-type: none"> Start generating immediately. If locked, unlock and generate immediately. <ul style="list-style-type: none"> If system is faulted, unit will unlock but will not generate.
Long press (> 2 sec) 		<ul style="list-style-type: none"> “Alternate functions” mode: Ready to accept further button pushes. This times out after 10 seconds.
1 press (after long press) 		<ul style="list-style-type: none"> Clear latched faults; for example, after arc-fault test or RCD (residual-current device) test initiated a fault condition.
3 presses (after long press) 		<ul style="list-style-type: none"> RCD-test activation. Successful activation of RCD test should cause a fault condition (rapid red flashing) until cleared.
4 presses (after long press) 		<ul style="list-style-type: none"> Arc-fault test activation. Successful arc-fault detection should cause a fault condition (rapid red flashing) until cleared.