


K2 Conduit Clamp, Kit

QUICK GUIDE

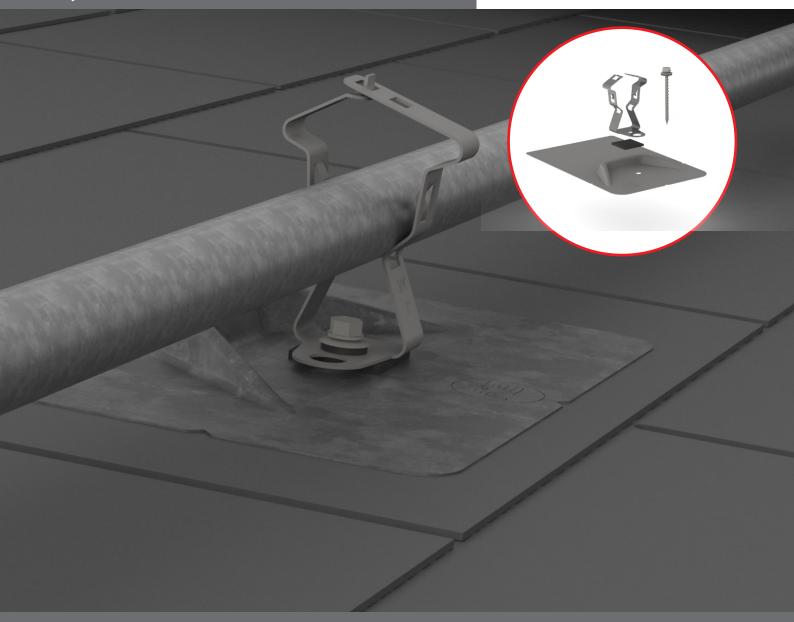

Kit



Part Number	Description
4000211	K2 Conduit Clamp, Kit

Tools overview





5/16" Nut Driver (For roof attachment screw)









Assembly Onto Roof




- 1
- Determine location of conduit run, and mark out shingle course where conduit clamps will be installed.

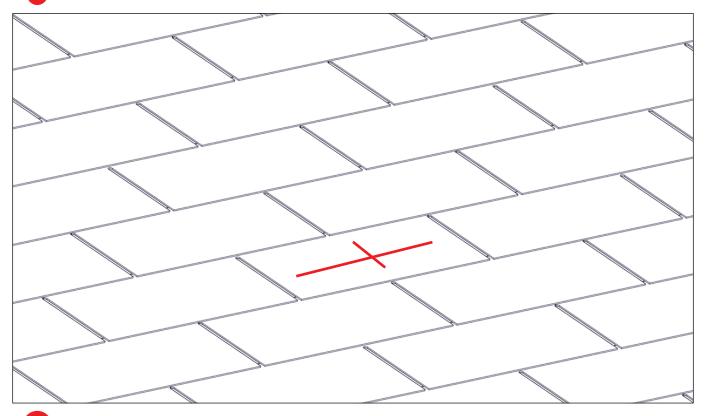


- Carefully break shingle seal strip to allow flashing installation. Apply an upside down U-shape bead of sealant on the underside of the flashing. Insert flashing under shingle so that the bot-
- bead of sealant on the underside of the flashing. Insert flashing under shingle so that the bottom edge is flush or just above shingle drip edge. Leave at least 1/4" space between flashing ridge and shingle drip edge to allow debris drainage.

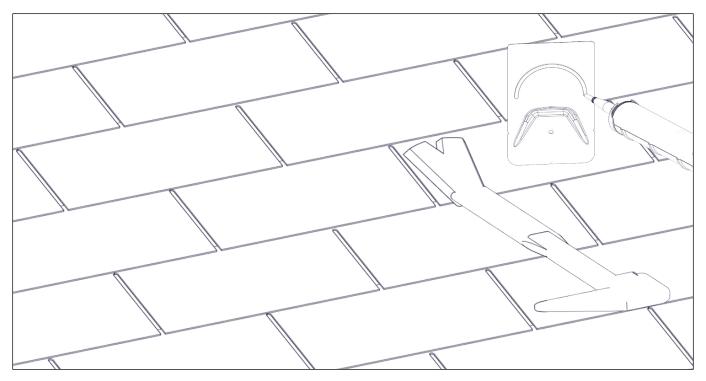

- 3
- Place conduit clamp onto flashing in desired orientation, lining up your wood screw hole on the clamp and flashing.

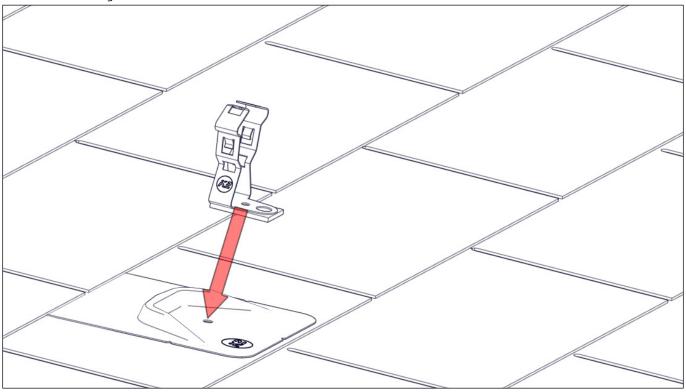


Using a 5/16" nut driver, fasten the provided wood screw through conduit clamp and flashing into roof decking, securing the clamp in desired orientation. To ensure the screw is properly fastened, drive the screw until sealing washer begins to spread. Do not overtorque or undertorque. See F1 below.

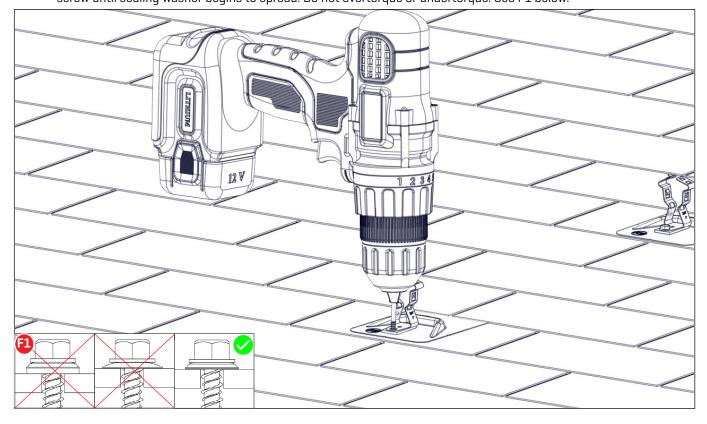




- 5
- Repeat process for installing additional conduit clamps, refer to your local AHJ for code requirements.

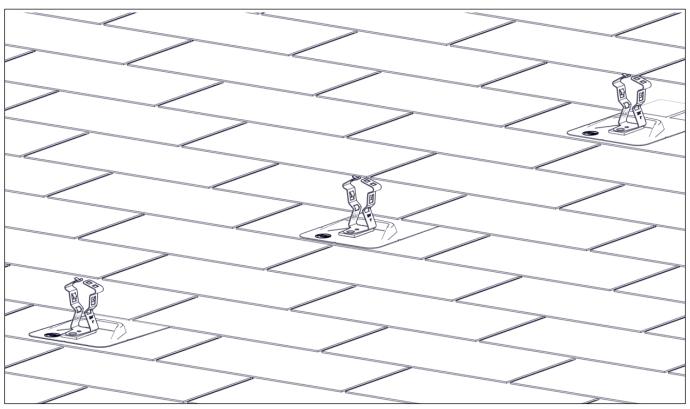



- 6
- Install conduit into clamp. Ensure the desires conduit position before closing the securement tabs. Acceptable conduit size of 3/4" or 1".

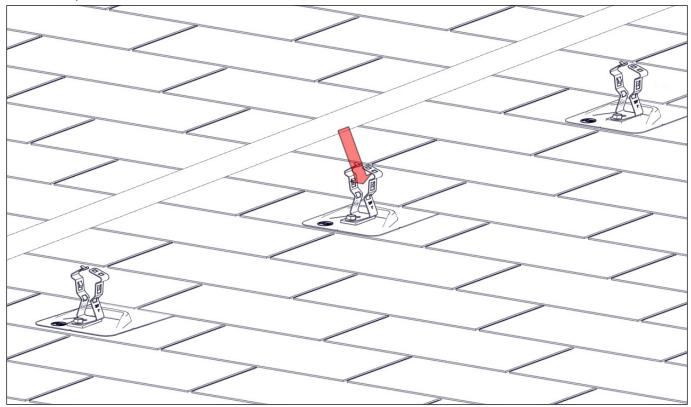



Secure conduit by pressing securement tabs closed to locking position for the appropriate conduit size. First securement tab hole will fit 1" conduit, and second hole will fit 3/4".

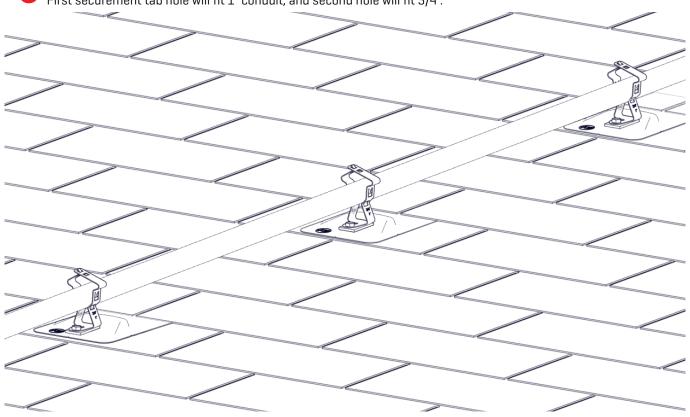

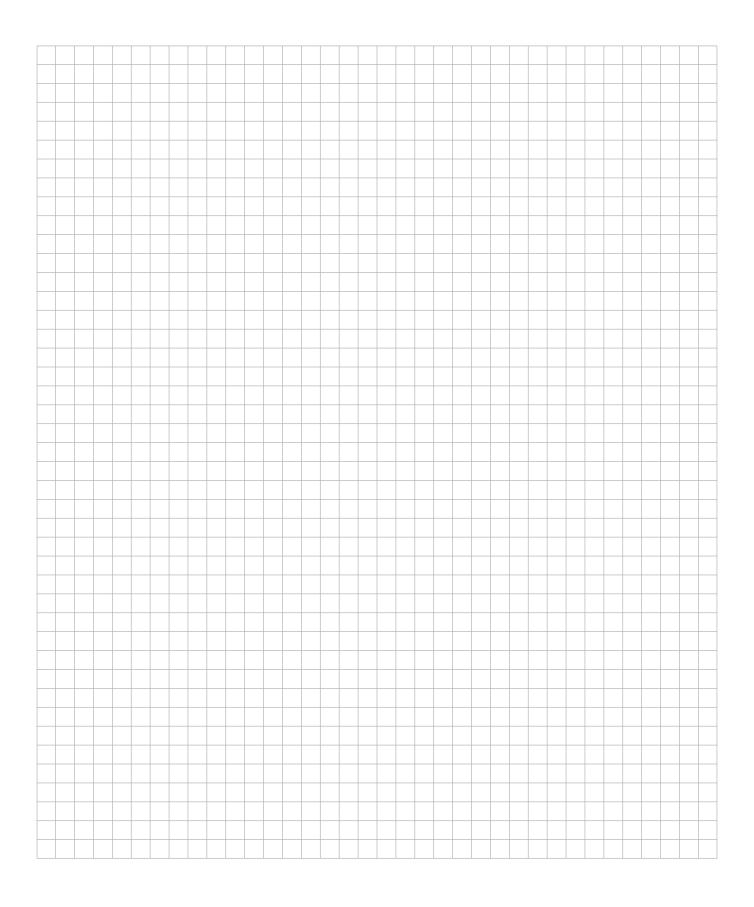



Thank you for choosing a K2 mounting system.

Systems from K2 Systems are quick and easy to install. We hope these instructions have helped. Please contact us with any questions or suggestions for improvement.

Our contact info:

- ▶ k2-systems.com/en-US/contact
- ▶ Telephone: +1.760.301.5300

K2 Systems LLC 4665 North Ave Suite I Oceanside, CA 92056 USA +1.760.301.5300 info@k2-systems.com www.k2-systems.com