

ABB solar inverters

Quick installation guide

UNO-DM-3.3/3.8/4.6/5.0-TL-PLUS-US-Q
(from 3.3 to 5.0 kW)

EN



APPLY HERE THE WIRELESS IDENTIFICATION LABEL

BCM.V2P24.0



Before starting installation, download the product manual from www.abb.com/solarinverters. Choose the correct country, string inverters, single phase, choose the product and proceed to the "download" section. Read and follow all safety and installation instructions to avoid disabling any safety features or making the warranty invalid.



Labels and Symbols

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS -- KEEP IN A SAFE PLACE!

The installer must read this document in its entirety before installing or commissioning this equipment.

For more detailed information regarding proper installation and use of this product, refer to the product manual located at www.abb.com/solarinverters. The labels on the inverter have the markings, main technical data and identification of the equipment and manufacturer. The technical data shown in this quick installation guide does not replace that shown on the labels attached to the equipment.

Symbols used in the guide and on the products					
	These are nationally recognized test laboratory marks showing certification to UL 1741 and CSA-C22 No. 107.1-01		System earth conductor (main grounding protective earth, PE)		Phase
	Hazardous voltage		Equipment Grounding Conductor (EGC)		Direct and alternating currents, respectively
	General warning - Important safety information		Stored energy discharge time		Positive pole and negative pole of the input voltage (DC)
	Hot surfaces		Consult product manual		


- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Inverter Models and Components

This installation guide covers 4 inverter models of different power levels: 3.3 kW, 3.8 kW, 4.6 kW and 5.0kW. For each model, the following variant is available:
UNO-DM-3.3-TL-PLUS-US-SB-RA-Q; UNO-DM-3.8-TL-PLUS-US-SB-RA-Q; UNO-DM-4.6-TL-PLUS-US-SB-RA-Q; UNO-DM-5.0-TL-PLUS-US-SB-RA-Q

Models equipped with Wireless communication, DC disconnection switch, Rapid Shutdown Power Supply and Arc Fault Detector
*Unbalanced input channels (only with 5kW models, refer to the datasheet or product manual)

Main components			
02 LED panel	10 UNO-DM-PLUS Ethernet COM KIT or UNO-DM-COM KIT board (optional)	16 Protective Earth (PE) connection point	22 Lock screw position
04 Inverter front cover	11 Inverter	17 Conduit drill out sizes 3/4", 1" (drill out markings on back side)	23 Power supply for rapid shutdown (RSD) terminal blocks
05 Wiring box front cover	12 DC input terminal blocks (two MPPT)	18 lower flange	24 Locking Screw
06 DC disconnect switch	13 AC output terminal blocks	19 1/2" communication conduit drill out	
07 Wall bracket	14 Wiring box	20 Markings for 3/4" or 1" conduit drill out	
09 Heatsink	15 Wi-Fi antenna (-B models only)	21 Opening for 3/4" AC conduit	

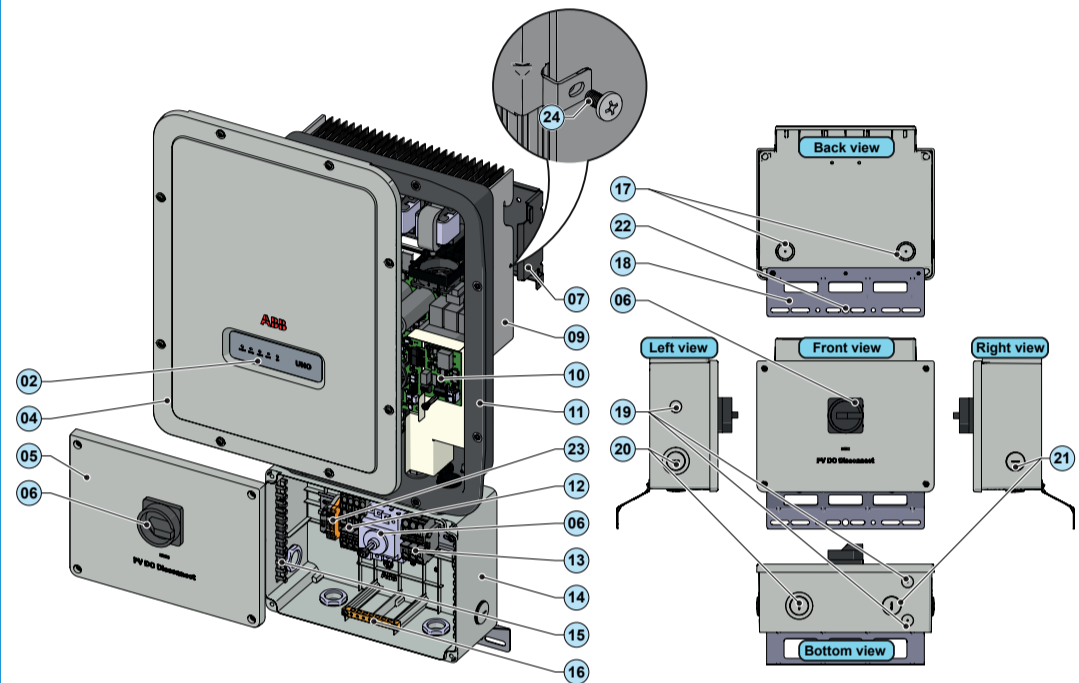

Installation location

3. Installation site and position

- Refer Datasheet/Manual to confirm that the environmental specifications have been met
- Do not install the inverter in full sun. If needed, use a sun shade to minimize solar irradiation, especially for temperatures over 104°F/40°C.
- Do not install in closed spaces where air does not circulate freely
- Always ensure that the flow of air around the inverter is not blocked, so as to prevent overheating.
- Do not install the equipment near flammable substances (minimum distance: 10 ft).
- Do not install the equipment on wooden walls or other flammable substances.
- Do not install in inhabited rooms or where the prolonged presence of people or animals is expected, because of the inverter's noise level during operation. The sound level is heavily influenced by its location (for example, the surface around the inverter, the environment, etc.) and grid quality.
- Install on a wall or strong structure capable of bearing weight
- Install vertically with a maximum inclination as indicated in the figure
- Maintain minimum clearance from objects blocking air circulation and spacing between inverter as indicated in the figures
- Ensure sufficient working area in front of the inverter for wiring box access
- If possible, install at eye level so that the LEDs can be seen easily
- Install at a height that takes account of the weight of the equipment
- Position multiple inverters side-by-side, maintaining minimum clearances (measured from the outermost edge of the inverter)
- Multiple inverters can also be placed in a staggered arrangement. Minimum clearances for staggered arrangements include width of the inverter cover plus additional allowances for inverters arranged above or below
- All installations over 6500' high (2,000 meters) must be assessed by ABB Technical Sales to determine the proper datasheet derating

Do not block access to the external AC and DC disconnects. Please refer to the warranty terms and conditions and avoid voiding the warranty with improper installation.

Mounting instructions

4. Mounting instructions

Mount the inverter following the step-by-step procedure below.

Do not remove the inverter chassis cover in adverse weather conditions (e.g. rain, snow) or during periods of high humidity (>95%).

Components included in mounting kit		Q.TY
	Wall bracket	1
	T20 Wall bracket locking screw (to be used when lock springs are missing)	2
	(Spare part) T20 screw for front cover	1
	Jumpers for configuring paralleled inputs	1 + 1
	Quick installation guide (QIG)	1

- Position the bracket (07) so that it is level on the wall or pole
- It is the installer's responsibility to choose an appropriate number and distribution of attachment points. The choice must be based on the type of wall, frame or other support, the type of anchors to be used, and their ability to support 4 times the inverter's weight (4x33lbs=132lbs for all models).
- Depending on the type and number of attachment points, drill the required holes to mount the bracket (see figure detail 07)
- Secure the bracket to the wall or frame
- If needed, make conduit cutouts in the wiring box chassis, before the wiring box is put on the wall
- Carefully lift the inverter and hook it onto the bracket by inserting the two supports in the slots on the inverter (Figure 08)
- Proceed to anchor the inverter to the bracket by installing the two (one each side) locking screws (Figure 09)
- If on the bracket are present the lateral lock springs, proceed to lock the inverter by pressing the lower part toward the wall or structure until the two springs on the bracket set the inverter in position (Figure 09)
- Secure the inverter chassis bottom flange to the mounting surface using another screw (see Figure detail 09). Note that the bottom flange is not a load-bearing component.

Clamps terminal use

5. Clamps terminal use

All power conductors will be inserted in spring clamp terminals.

The figure shows an example of how to make the wire connection:

- 1) Insert a small flat screwdriver in the slot and lightly press the screwdriver from top to bottom; insert the screwdriver until the spring opens.
- 2) Insert the cable in the spring clamp.
- 3) Remove the screwdriver.
- 4) When connections are complete, give each wire a pull test

Rapid Shutdown

6. Rapid Shutdown

Warning: If an RSD device is installed on the plant, the inverter will power-up only if both AC and DC are supplied!

The installer must use an external rapid shutdown device compliant with the 2014 NEC. Automatic shutdown occurs at the rooftop box when utility power (AC) is lost or when the PV system's AC disconnect switch is opened. In jurisdictions requiring a dedicated activation switch should be installed an emergency stop button external to the inverter.

The wiring box has 24Vdc (0.4A max) on a spring-loaded terminal block designed to power-up an external RSD device.

The wire size range of RSD terminals is 26-12 AWG.

- Connect the RSD device respecting the polarity indicated on each RSD terminal.

Input connection (DC)

7. Input connection (DC)

Confirm the correct polarity in the input strings.

Confirm there is no ground leakage current in the PV array.

When exposed to sunlight, the PV panels supply DC direct voltage to the inverter. The inverter's DC switch disconnects the DC current from the PV panels. In the "OFF" position the inverter will stop producing power, but DOES NOT disconnect the AC from the grid. To prevent electrocution hazards, all the connection operations must be carried out with the external AC disconnect switch, downstream of the inverter (grid side), open and locked out.

The transformerless design requires that the PV array to be floating with respect to ground per NEC 690.35. DC PV string wire must be listed PV wire per NEC 690.35 rated minimum 600V. PV output conductors (wiring) must consist of sheathed (jacketed) multi-conductor cables or single insulated conductors (wires) which must be installed in an approved raceway. These conductors must be isolated from the enclosure and system grounding, as required by NEC 690.35. This is the responsibility of the installer.

Confirm that the maximum PV array short circuit current is within the inverter specification (see table in Section 14). Array equipment grounding must be installed per the requirements of the NEC and is the responsibility of the installer. A configuration program that can help to correctly size the photovoltaic system is available on at <http://www.stringsizer.abb.com>.

- Turn the DC switch OFF
- Loosen the four captive screws on the wiring box cover (Torx 20) and remove the cover
- Pass the DC wires through the openings dedicated to the DC conduit.

Conduit must be sealed using water-tight fittings to maintain NEMA Type 4X enclosure integrity. Installer should follow conduit manufacturers' guidelines and best practices.

- Connect the DC wiring to DC input terminal blocks (12). DC wiring terminals are spring pressure type and accommodate a wire size range of 20-8 AWG. Connect the strings in either independent or parallel mode, following the appropriate set of instructions below:

Independent mode configuration	Parallel mode configuration
In case of two PV arrays, if each of them has a current rating lower than the maximum current rating for a single inverter channel, they may be connected as "IND" array, each with its own MPPT. In this case, do nothing with the jumper wires which came with the inverters.	If a PV array's output current is more than the rating for a single inverter channel:
- Connect the positive side of the first PV array to +IN1, and its negative side to -IN1.	- connect the red jumper wire between the +IN1 and +IN2 terminal block inputs. Then connect the jumper wire black wire between the -IN1 and -IN2 terminals. During commissioning remember to set the input mode to PAR.
- Connect the positive side of the second PV array to +IN2 and its negative side to -IN2.	- Connect the array to the IN1 (MPPT1) and IN2 (MPPT2) input positions, running separate wires for positive (+) and negative (-) for each array.
Up to four strings can be connected in independent mode.	
- During commissioning, confirm that the input mode is set to IND.	

If connecting a single array, configure the inverter for parallel input mode.

