


Freedom X Remote Panel User Guide

Model Numbers: 808-0817 | 808-0817-02

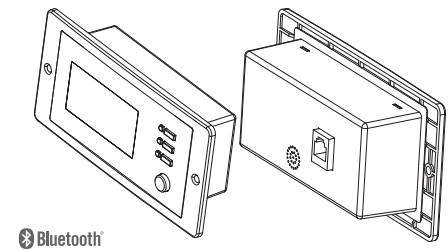

Freedom X Remote Panel

Model number: 808-0817

Freedom X Remote Panel (Bluetooth)

Model number: 808-0817-02



DANGER

HAZARD OF FIRE, ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

This Freedom X Remote Panel User Guide is in addition to, and incorporates by reference, the relevant product manuals for each product in the power system. After reviewing this guide you must read the relevant product manuals. Unless specified, information on safety, specifications, installation, and operation is as shown in the primary documentation received with the product. Ensure you are familiar with that information before proceeding.

Failure to follow these instructions will result in death or serious injury.

Exclusion for Documentation

UNLESS SPECIFICALLY AGREED TO IN WRITING, SELLER (A) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION; (B) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK; AND (C) REMINDS YOU THAT IF THIS MANUAL IS IN ANY LANGUAGE OTHER THAN ENGLISH, ALTHOUGH STEPS HAVE BEEN TAKEN TO MAINTAIN THE ACCURACY OF THE TRANSLATION, THE ACCURACY CANNOT BE GUARANTEED. APPROVED CONTENT IS CONTAINED WITH THE ENGLISH LANGUAGE VERSION WHICH IS POSTED AT WWW.XANTREX.COM.

NOTE: Visit www.xantrex.com, click Products, select a Product category, select a Product, and search the Product Documents panel for a translation of the English guide, if available.

Contact Information

Telephone: +1-800-670-0707 / +1-408-987-6030
Email: customerservice@xantrex.com,
<https://xantrex.com/support/get-customer-support/>
Web: www.xantrex.com

1

Introduction

Thank you for purchasing the Freedom X Remote Panel. This user guide will help you install and use the remote panel to operate and configure the Freedom X and XC series remotely. Check that you have the following items in the box before proceeding.

- the Freedom X remote panel unit
- user guide and mounting template
- 25-ft. 6-conductor cable kit (808-0817-02 model only)

If you received the 808-0817 model, acquire one of the following 6-conductor cable kit from Xantrex. Go to <https://xantrex.com/support/> to order.

- 25-ft. 6-conductor cable kit (PN: 31-6257-00)
- 50-ft. 6-conductor cable kit (PN: 31-6262-00)

FCC/IC Information to the User

This device complies with Part 15 of the FCC Rules/Canada Industry licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment to a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- RF Exposure: The equipment has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.
- FCC ID: 2AODL-FXRP-BT / IC: 23407-FXRPBT

2

Installation

1. Prepare the remote panel unit and the 6-conductor com cable kit.
2. Choose a location for the remote panel unit within reach of the com cable and the inverter unit.
3. Use the mounting template (in section 9) to make the installation of the remote panel easier.
4. Mount the remote panel unit.
5. If you are replacing a Freedom 458 unit and its remote panel, the new Freedom XC unit and Freedom X Remote Panel (PN: 808-0817-02) will fit in your existing wall cutout using the Wall Mount Adaptor (PN: 808-0819) described in section 10.

Function Buttons

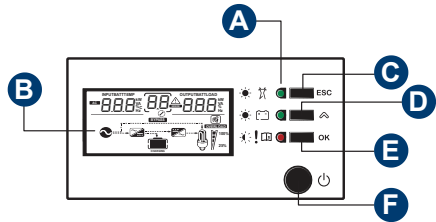

- A Status LED indicators
- B LCD screen
- C ESC button - return to default screen or exit setting mode
- D Scroll button - next screen or next selection
- E OK button - enter the setting mode or to confirm the setting
- F Power button - turns the inverter unit on or standby (operates only when the inverter's Power button is off)

NOTE: Briefly pressing any function button activates backlight illumination. After 30 seconds of inactivity, if backlight auto-off is enabled, illumination turns off.

3

Status LED Indicators

	Indicates grid mode in which shore power is available and passing through to the loads and charging the battery.
	Indicates battery mode (inverter mode) in which the inverter is running and supplying power to the loads from the battery.
	Indicates error or fault mode and is accompanied by an error code displayed on the LCD screen.
	Indicates a warning condition and is accompanied by an error code and a sounding alarm.

4


LCD Screen

NOTE: For a complete listing and description of the icons, see the Owner's Guide of the inverter or inverter/charger unit.

	AC input and output indicator.
	The wrench icon underneath a number is displayed during configuration mode.
	An error event with its corresponding number is displayed here.
	A warning event with its corresponding number is displayed here.
	The battery icon indicates remaining battery power. One bar = 1-25%, two bars = 25-50%, three bars = 50-75%, and four bars = 75-100%.

	Shows an AC output overload condition.
	The load icon is displayed if there is voltage available at the AC output.
	The bar represents load consumption levels. 100% is an indication of full capacity and 25% indicates low consumption. All the bars disappear at < 20 watts, and AC load indicates zero watt power.
	Shows up in grid mode when AC shore power is present. If the power is being qualified, then this icon will flash.
	Shows that the unit is in grid mode and is bypassing shore power directly to the loads.
	This icon shows when there is power conversion from AC to DC - charging. Applicable only to Freedom XC units.
	This icon shows when there is power conversion from DC to AC - inverting.
	The alarm buzzer is muted. For more information, see Freedom inverter's Owner's Guide.

Viewing Information During Battery Mode

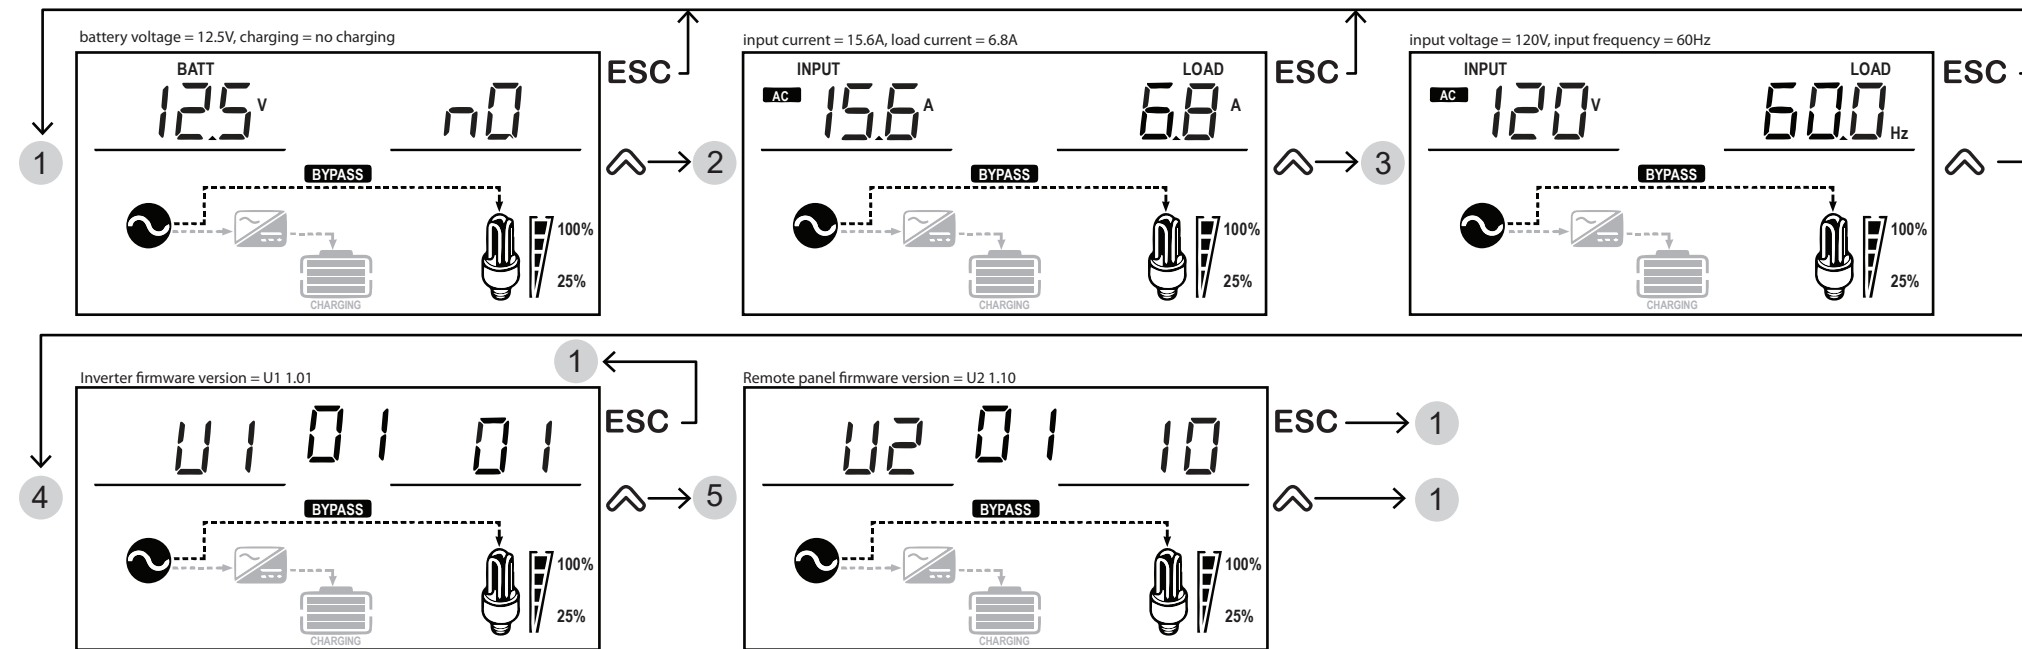

Press scroll [↵] to move to the next screen. Press [ESC] to return to the home screen.

NOTE: Screen 3 appears only when AC qualification is pending.

Adjusting Feature Settings

NOTE: See the Freedom X / XC Owner's Guide for information on the individual settings.

1. Press and hold the [OK] button for three seconds to enter the feature settings mode.
2. Press the scroll [↵] button to move through the different feature settings.
3. Press the [OK] button to select a setting number and change its value.
4. Press the scroll [↵] button to change the value until you reach the desired value.
5. Press the [OK] button to confirm the change.
6. Repeat previous steps to set other feature settings.
7. Press [ESC] to exit the feature settings mode.


NOTE: It may take a minute for the settings to take effect on the inverter unit.

Backlight Auto-off

NOTE: When Auto-off is enabled (EnA) the Freedom X Remote Panel LCD screen's backlight illumination turns off after 30 seconds of inactivity. This feature does not affect the LCD screens on the Freedom X / XC units.

1. Press and hold the [OK] button for three seconds to enter the feature settings mode.
2. Press the scroll [↵] button to setting 29.
3. Press the [OK] button to select it and change its value.
4. Press the scroll [↵] button to either EnA or d 15.
5. Press the [OK] button to confirm the change.
6. Press [ESC] to exit the feature settings mode.

Viewing Information During Grid Mode

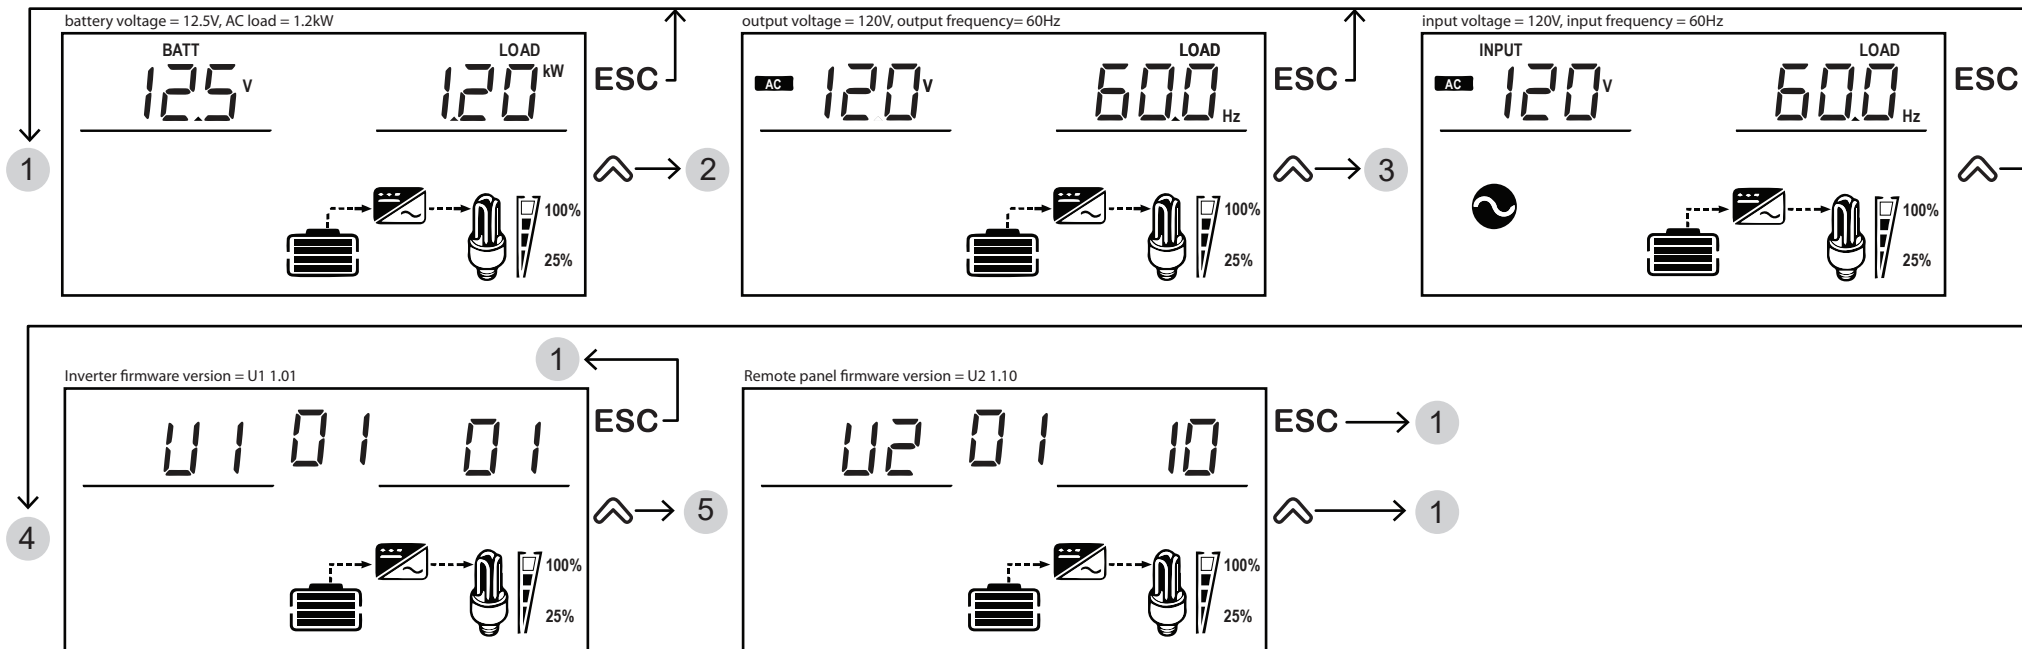

Press scroll [↵] to move to the next screen. Press [ESC] to return to the home screen.

NOTE: Screen 2 appears only in Freedom XC units. Greyed out icons also appear only on Freedom XC units.

Creating a Bluetooth Link with the Freedom X Remote Panel App

The Freedom X Remote Panel app (FXC Control) allows you to conveniently monitor and configure a Freedom X inverter | XC inverter/charger^a with a compatible smart device^b using a Bluetooth connection.

1. Download and install the FXC Control app into a compatible Android or iOS smart device.
2. Turn on the Bluetooth enabled Freedom X Remote Panel by using the ON/OFF button on either its own front panel or the connected inverter's front panel.
3. Launch the FXC Control app on your smart device.
4. Turn on the smart device's Bluetooth through the Bluetooth toggle on the app. The app should now indicate that it is searching for devices.
NOTE: On Android 5 and later, not only Bluetooth has to be enabled, but Location Services needs to be enabled before Bluetooth scanning can proceed. Please enable Location Settings and ensure Bluetooth is enabled for all Apps and for the FXC Control App.
5. On the Freedom X Remote Panel, press and hold the ESC button to enable Bluetooth pairing on the remote. Remote pairing can be observed by the two flashing horizontal lines underneath the left and right numbers.
6. When the app has detected the Bluetooth signal, it will display the connected inverter's serial number in the app. Click on the serial number to complete the pairing process.
7. To stop the Bluetooth connection, disable the smart device's Bluetooth connectivity.

^a List of compatible Freedom X/XC units: 817-1000, 817-2000, 817-2000-21, 817-3000, 817-1050, 817-2080, 818-2010, 818-3010, 806-1212
^b Compatible smart devices: iPhone or iPad running iOS 8 or higher, Android phone or tablet running v8 or higher with Bluetooth Low Energy compatibility

Installing the Remote Panel Unit on the Wall

1. Place the template (*Figure 1*) on the wall.
2. Mark the corners (or trace the dotted lines) of the recess outline on the wall.
3. Mark the two mounting holes for the two screws on the wall.
4. Remove the template from the wall.
5. Cut along the recess outline on the wall to make a hole for the remote panel's body.
6. Pre-drill the mounting holes appropriate to the mounting screws (not provided) that will be used.
7. Connect the 6-conductor com cable to the RJ12 ports on the inverter and remote panel.
8. Mount the remote panel unit on the wall.


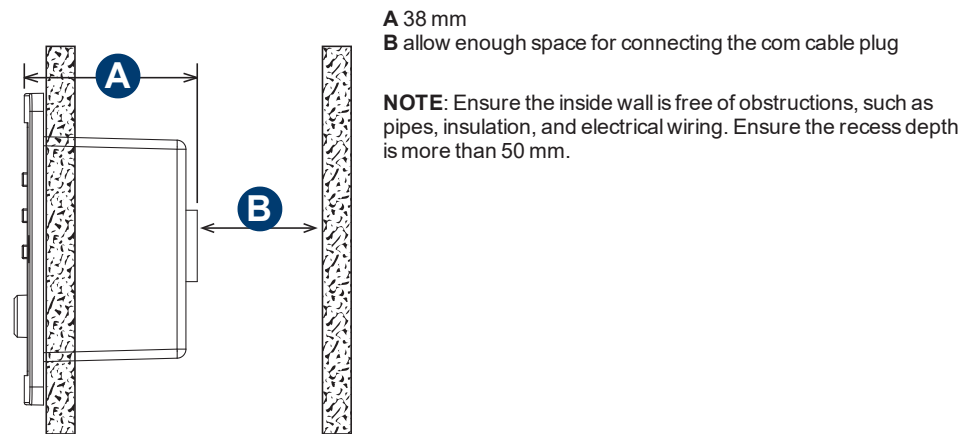



Figure 1 Template (scale 1:1)

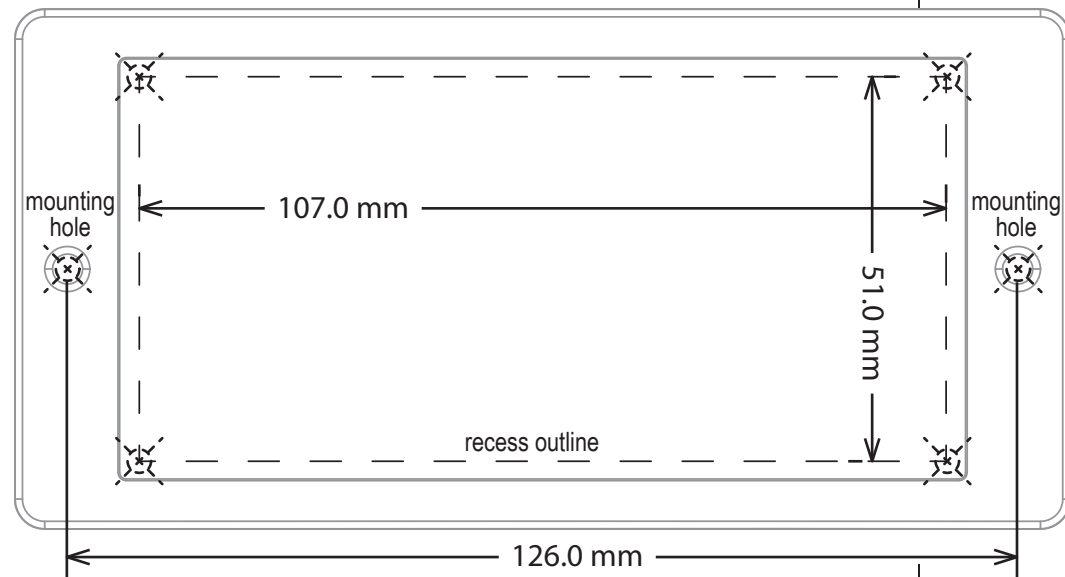

Installing the Freedom X Remote Panel with a Wall Mount Adaptor


The Freedom X Remote Panel Wall Mount Adaptor (PN: 808-0819) allows the installation of the Freedom X Remote Panel onto an adaptor bezel which then fits over the existing wall panel opening of a Freedom 458 Basic Remote Panel.

1. Unmount the Freedom 458 Basic Remote Panel from the wall by removing the four screws securing it to the wall. Set aside the four screws.

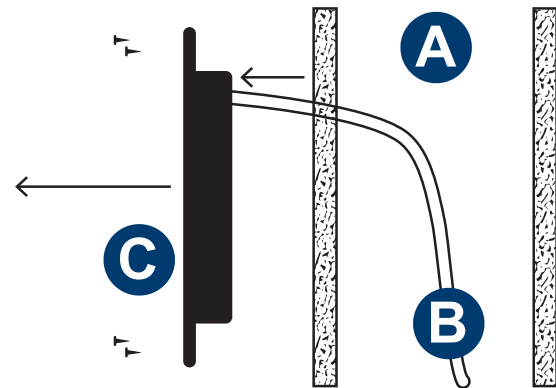

2. Detach the six-conductor telephone cable from the Freedom 458 Basic Remote Panel.

3. Install the Freedom X Remote Panel Wall Adaptor to the wall at the outer corners with the four screws in step 1. Alternatively, use optional counter-sink screws, if needed.

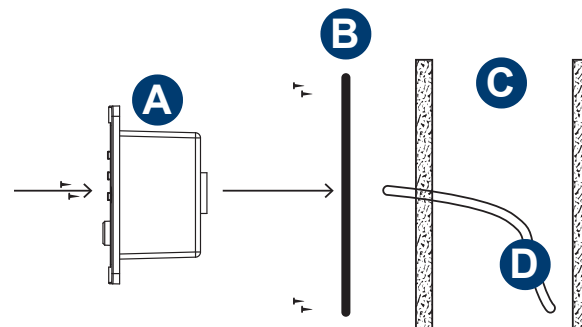

4. Take the Freedom X Remote Panel and attach the six-conductor telephone cable from the wall opening.
5. Mount the Freedom X Remote Panel to the Freedom X Remote Panel Wall Adaptor securing it with the two supplied mounting screws.
6. Complete the inverter installation and start up procedure in the Freedom X/XC Owner's Guide.