

Features:

- Universal AC input with active PFC
- Compatible with Lead Acid, Li-ion, Gel and AGM batteries
- Support optional remote controller (CR-1)
- Voltage / temperature compensation with battery temp. sensor (Optional)
- 2-stage fan speed control
- Dry contact for alarm
- High efficiency and high reliability
- **Built-in battery rescue function**
- Built-in Engine Start Battery (ESB) output function
- Protection: Short Circuit / Over Voltage / Over Temperature / Brown-out
- Withstand 2G vibration test
- RS-232 communication interface
- Output power OK signal




	MODEL	CX2415	CX2425	CX2440		
	Battery Type		Lead Acid / Li-ion / Gel / AGM	1		
Standard Boost Charge Voltage Standard Float Charge Voltage		28.8V / 29.4V (Select by S1-1)				
		27.6V / 27V (Select by S1-2)				
	Main Rated Current	12.5A	25A	40A		
	Current Range	0 ~ 12.5A	0 ~ 25A	0 ~ 40A		
0	Main Output	2	3	3		
Output	Battery Charging Mode	3 - stage charging capability (IUoU)				
	Single Output Current Limit	12.5A	25A	40A		
	Voltage Range	90 ~ 264VAC				
	Power Factor (Typ.)	PF > 0.92 at full load				
	Frequency Range	47 ~ 63Hz				
Input	Efficiency (Typ.) at 230VAC	90%	90%	90%		
	AC Current (Typ.)	4.2A / 100VAC 1.7A / 240VAC	8.3A/ 100VAC 3.6A / 240VAC	13.3A / 100VAC 5.4A / 240VAC		
	Leakage Current	For earth < 1mA / 240VAC				
	Short Circuit	Current is reduced to < 1A continued 30sec. , will operate 30 seconds then turn off				
	Over Voltage	35V ±1%, Protection type: Shut down output (recovery after resetting AC power on)				
Protection	Over Temperature	Charger Over Temperature 100 ±5°C detected by heat sink Battery Over Temperature 52 ±5°C (Optional device - COTEK temperature sensor), connect on CN3 Protection type: Auto recovery after heat sink temperature goes down to 50°C				
	Alarm Signal	. ,	refer to page 5 Alarms Signal & Fan Co	ontrol)		
	Power Mode	Supply 26.4V Current limit output voltage				
Function	Temperature Compensation	-10mV / 0.5°C with COTEK temperature				
	Charging Sleep Mode Note.4	By Remote Controller and S1-4 DIP sw				
	Remote Controller Note.5	Support COTEK Remote Controller CR	, , ,			
	Working Temp.	-20 ~ 50°C (refer to output load de-ratin	ig curve)			
F	Working Humidity	20 ~ 90% RH non-condensing -40 ~ +75°C, 20 ~ 90% RH				
Environment	Storage Temp., Humidity	±0.03% (0 ~ 50°C)				
	Temp. Coefficient	±0.03% (0 ~ 50°C) 10 ~ 500Hz, 2G 10min. / 1cycle period for 60min. each along X, Y, Z axes				
	Vibration		for 60min. each along X, Y, Z axes			
	Safety Standards	Certified EN 60335-1, EN 60335-2-29	0/D FO: 700\/DO			
	Withstand Voltage Isolation Resistance	I/P-O/P: 4242VDC, I/P-FG: 1768VDC, O/P-FG: 700VDC				
Safety & EMC		I/P-O/P: 100M Ohms / 500VDC				
	EMI Conduction & Radiation	EN 55022; EN 55024; EN 61204-3; EN 55014-1; EN 55014-2 EN 61000-3-2; EN 61000-3-3; EN61204-3; EN 61000-6-1; EN 61000-6-3				
	Harmonic Current					
Note.2	EMS Immunity	IEC 61000-4-2, 3, 4, 5, 6, 8, 11; ENV 50		040-77-040		
Others	Dimension (WxHxD) Packing	183x72x243mm 1.6kg	213x77x272mm 2.9kg	213x77x312mm 3.9kg		
Note	All parameters not specially mentioned The charger is considered a componend directives. Before charging, make sure the battery When use sleep mode, please refer to Optional Remote Controller (CR-1).	are measured at 230VAC input, rated lo it which will be installed into a final equip charger and battery specifications are of	ad and 25°C of ambient temperature. ment. The final equipment must be re-co			


Unit : mm[inch]




Mechanical Drawings:

MODEL: CX2415

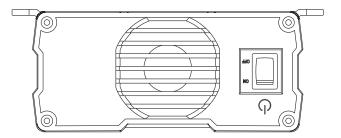

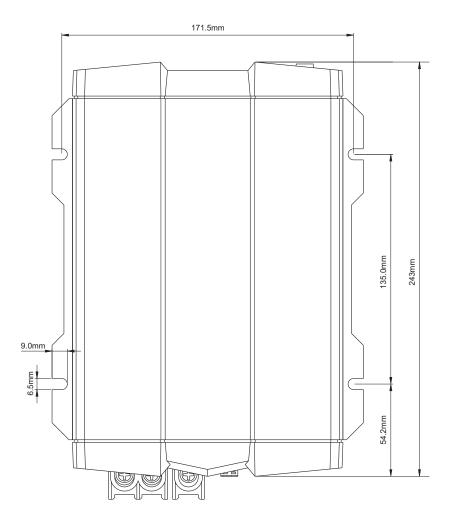

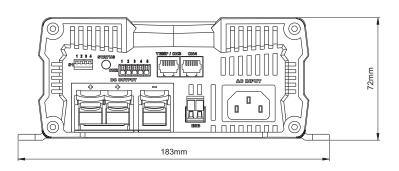


Air Flow



Unit : mm[inch]

MODEL: CX2425/2440

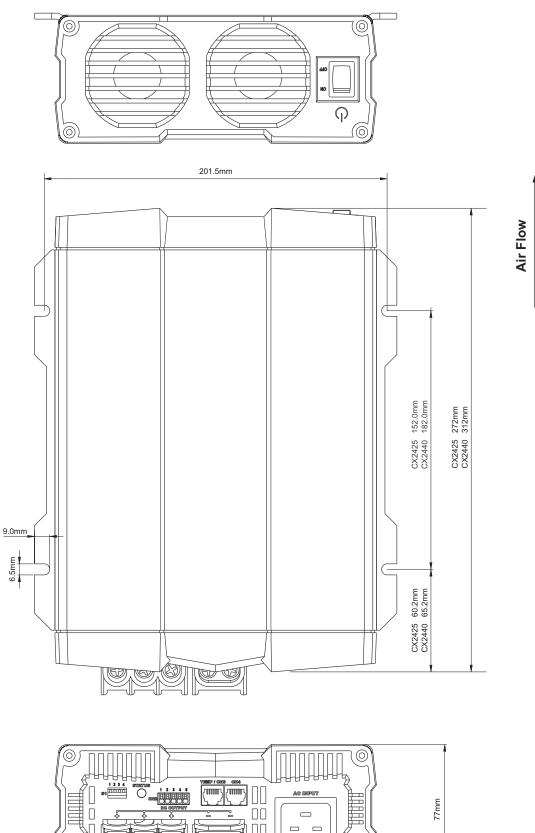



■ Charging Mode Setting (S1):

Status	1	2	3	4	12V/24V CC/CV	12V / 24V Float
CC turn to CV voltage	ON	Х	OFF	Х	14.4V / 28.8V	
CC turn to CV Voltage	OFF	Х	OFF	Х	14.7V / 29.4V	
Float voltage	Х	ON	OFF	Х		13.5V / 27.0V
1 loat voltage	Х	OFF	OFF	Х		13.8V / 27.6V
	OFF	OFF	ON	Х	13.2V / 26.4V	
Power Mode (Current limit output voltage)	OFF	ON	ON	Х	13.8V / 27.6V	
	ON	OFF	ON	Х	14.4V / 28.8V	
REMOTE	ON	ON	ON	Х		
For force ON / OFF	Х	Х	Х	ON		
Fan force ON / OFF	Х	Х	Х	OFF		

X: Not applicable

■ Charging Status and Indicator:

Charging status	LED Status		Alternation in the charging Status		Default setting	
Bulk-1	Orange fast	Charging voltage >20.4V and < float voltage			NO	
Bulk-2	Orange slow		1.Charging voltage > Float voltage and charging current >= Rating current		6 hours	
Bulk-2 Orange slow			2.Charging voltage = CV voltage and charging current < Rating current	2 minutes	Officials	
Absorption-1	Orange solid ————		Charging current > 6% of rating current (±1%)	6 hours		
Absorption-2	Green solid		Charging current < 6% of rating current (±1%)	81	nours	
Floot	Green flash		1.Charging voltage >25.6V	336 hours	Unlimited	
LED colour change by the status change		nange by the status change	The voltage goes up to CV voltage to charge the battery once every 288 hours	85 minutes	circle	
Float to Bulk-1			Charging voltage < 25.6V	30 sec.		

Note: 1. IBS Sensor is feedback 100% charge to change Status.

Failure Indicator:


Failure status		LED Status	Description	Activate	Recovery
			Current is reduced to <1A, Continued 30 sec., FAN turn on 30 sec then turn off.	Output <1V	AC Reset, Output>18V
Input or Output	' I Dad calid I		AC I/P unstable	<85V,>270V	>90V,<264V
			Output FUSE blown	Voltage difference >0.5V,>0.1 sec.	AC Reset
			Battery over heat (the indicator available when COTEK temperature sensor connected only)	>52℃	<45°C
Temperature	Red fast	d fast	Battery in cold condition (the indicator is available when COTEK temp. sensor is connected)	<-18℃	>-10℃
			Charger over heat (Heat Sink)	>100°C	<50℃
Battery Voltage	any Voltage De Labor		Battery over voltage	>35V	AC Reset , <31.4V
Battery Voltage Red slow		Battery under voltage or output under voltage in CC mode.	<20.4V	>21V	
Fan Abnormality	Red light flash twice		Fan abnormality		

^{---:} Not applicable




TEMP/CN3:

1	R_VCC
2	GND
3	TEMP
4	BAT-
5	DATA I/O
6	BAT+

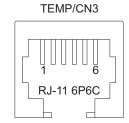

CN4:


1	R_VCC
2	BAT-
3	NC.
4	BAT-
5	DATA I/O
6	BAT+

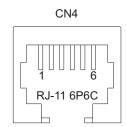


Alarms Signal and Fan Control Connectors Pin Definition(CN2):

1	Normally Closed
2	Normally Open
3	COM
4	Sleep Mode Control
5	GND

4-5 SHORT	Sleep Mode ON
4-5 OPEN	Sleep Mode OFF

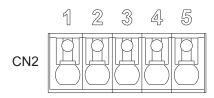


Charging Curve at Temperature Compensation:

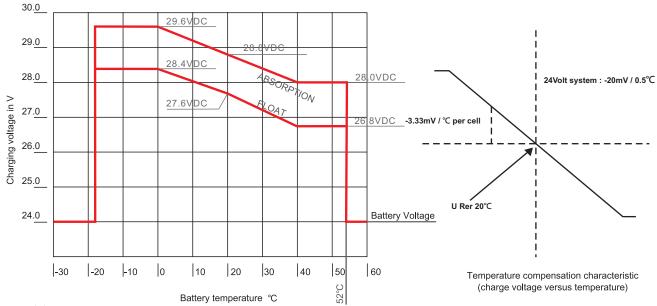


XIn the CV=28.8V and float =27.6V situation. Please follow this rule in other situation.



Charging curve:

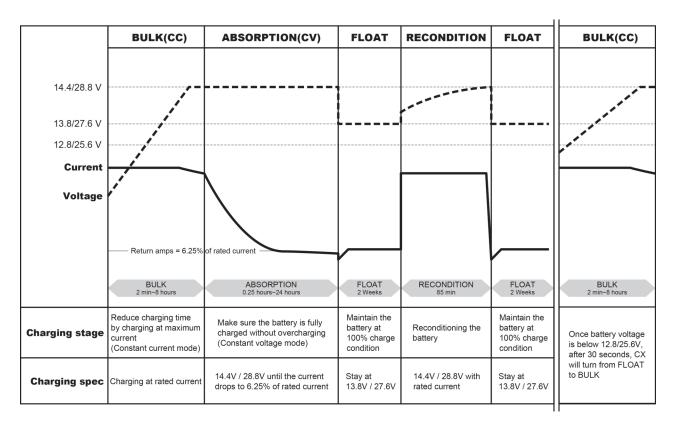

Charger Current vs Heat Sink Temperature De-rating Curve:

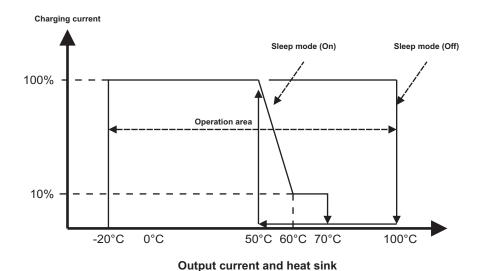

Rescue Battery Curve:

